


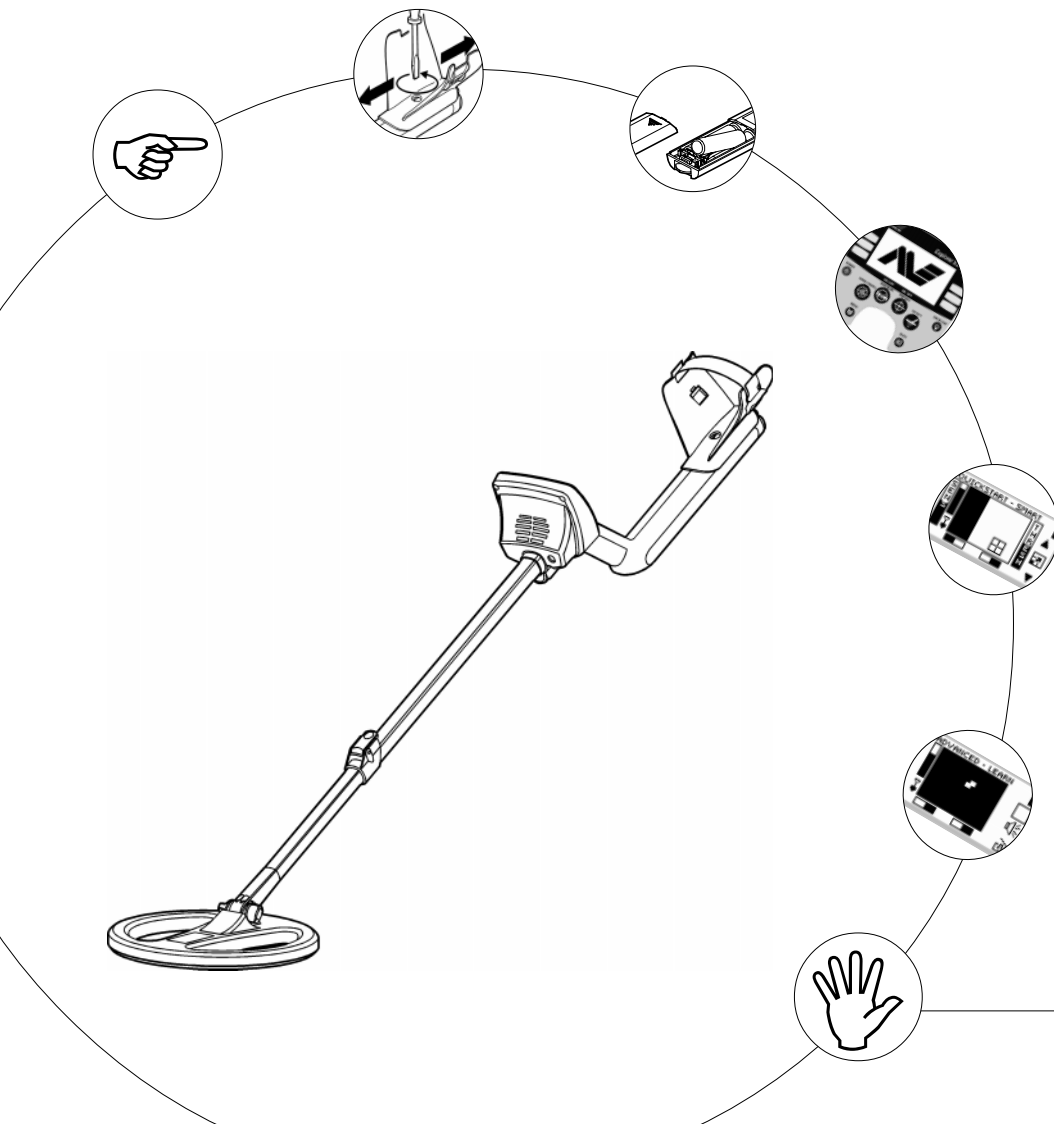

Minelab Explorer™




© Minelab Electronics Pty Ltd

This document contains proprietary information which is protected by copyright. Apart from any use as permitted under the Copyright Act 1968, no part may be reproduced by any process without written permission from Minelab Electronics Pty Ltd, 118 Hayward Avenue, Torrensville, SA 5031, Australia.

WARNING. This document contains Minelab Electronics Pty Ltd rights, technical data or restricted rights data or both. Patents and trademarks apply.

EXPLORER MODEL DIFFERENCES

Please note that this manual describes all features on both models of Explorer.

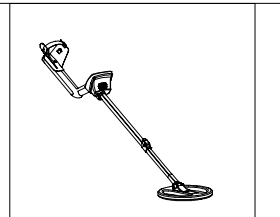

There are differences in features and functions between the Explorer S and Explorer XS models. Please refer to the Model Feature List included in the Explorer Carton to check which features are included in your detector.


TABLE OF CONTENTS

contents

1	INTRODUCTION	1
	About this manual	2
	Introducing the Minelab Explorer	3
	Minelab's unique technology	4
2	ASSEMBLY	9
	Unpacking your Explorer <i>[easy reference]</i>	10
	Unpacking your Explorer	11
	Assembling the detector	12
	Connecting the search coil	13
	The shaft assembly	15
	Connecting the shaft assembly	16
	The handle assembly	18
	Replacing and fitting components	20
	Headphones	22
3	BATTERIES	23
	The battery pack	24
	Battery performance	26
4	THE CONTROL PANEL	27
	The control panel <i>[easy reference]</i>	28
	The Power and Backlight buttons	29
	Menu and Back buttons	30
	Shortcut buttons	31
	Shift buttons	33

TABLE OF CONTENTS

contents

5	QUICKSTART	35
	Getting started	36
	Beginner use	37
	Quickstart display [<i>easy reference</i>]	38
	Quickstart's Smartfind display	40
	Quickstart's Digital display	45
	Modifying the display	46
	Adjusting sensitivity	47
	Adjusting threshold	48
	Audio response	50
	Audio menu	51
	Audio: adjusting the volume	52
	Audio: adjusting the tone	53
	Audio: adjusting the sounds	54
	Testing target audio responses [<i>tutorial</i>]	56
	Pinpointing the object	57
	Recovering the object	59
	Selecting targets	60
	Selecting targets [<i>easy reference</i>]	61
	Accepting and rejecting targets [<i>tutorial</i>]	62
	Advanced mode option	63



TABLE OF CONTENTS

contents

6	ADVANCED USE	65
	Advanced mode's Main Menu <i>[easy reference]</i>	66
	Starting in Advanced mode	67
	Advanced Mode's displays <i>[easy reference]</i>	68
	Advanced mode's Learn display <i>[easy reference]</i>	69
	Learning targets	70
	Learn's target selection <i>[tutorial]</i>	71
	Advanced mode's Edit display <i>[easy reference]</i>	73
	Editing patterns	74
	Editing and saving target patterns <i>[tutorial]</i>	75
	Advanced mode's Select menu	77
	Saving targets	78
	Audio menu	79
	Options menu	80
	Options: noise	81
	Options: response	82
	Options: recovery	84
	Settings menu	85

TABLE OF CONTENTS

contents

7	USER INFO	87
	Helpful hints	88
	Battery performance comparisons	90
	User preferences	91
	Control Panel button functions	93
	Quickstart menu structure	94
	Advanced menu structure	95
	Troubleshooting	96
	Service repair form	97
	Warranty	99
	Technical specifications	100
	Explorer model features	101
	Glossary of terms	102
	Detector care and safety	106